

# Manual uncapping device with steam generator

W20960C, W20960F, W20960FS, W20960LN, W20960LNS



## Safety Instructions

1. Read the user manual before use and follow the instructions below. Producer cannot be held responsible for any damages caused by improper use.
2. This device is not designed to be used by persons (including children) with limited physical, sensual or psychological abilities or by persons who do not have experience or knowledge of the device unless it is done under supervision and according to the user manual passed by persons responsible for their safety.
3. Use only grounded source of electricity to supply this device.
  - a) Electric installation needs to be equipped with residual current device and is designed to trip on a leakage current of 30 mA. Overcurrent protection needs to be checked periodically.
  - b) It is not allowed to carry out any maintenance works if any covers or parts are removed from the device
  - c) All casings need to be firmly attached to the device during work.
  - d) Pay special attention during uncapping process
4. Do not leave the device unattended while working
5. Do not move the device during uncapping process
6. Do not top-up water for steam generator during uncapping process – unplug the device and wait at least 2 minutes before topping the device up.
7. Do not turn the device on if the power cord is damaged
8. Take extra care whilst plugging a power cord  
Hands have to be dry. Place on a dry surface
9. Do not pull power cord, keep the power cord away from heat sources, sharp edges and keep it in good condition.
10. Periodically check the power cord for damage. In case of any visible damage contact qualified personnel to replace it, and do not use the device until the power cord is fixed.

## How to use


1. this device is designed to fit any type of uncapping table or tank.
2. After installing make sure that operation is easy and comfortable.
3. Before work make sure that the steam generator is topped out with water (do not exceed MAX level mark) and then plug it into 230V mains socket. **(Do not turn the device on with empty water tank)**
4. Uncapping knives are heated with steam. Begin uncapping only after the knives reach their work temperature.
5. The frame feeder is fitted with hand protection feature
6. Place the frame on a feeder taking extra care about the knives. If the uncapping angle or temperature is incorrect:
  - a) adjust the angle using appropriate screw (under the knife blade). Protect your hands by using thick cotton gloves.
  - b) If the temperature is not right, wait until heat up to proper temperature
7. Push the frame along the sliders to uncap



### Warning!

Sharp edges in the device. Keep away from children. Pay extra care about knives, they are really SHARP and HOT

The device is made of acid-resistant stainless steel  
Two size options available 1000mm and 1500mm.

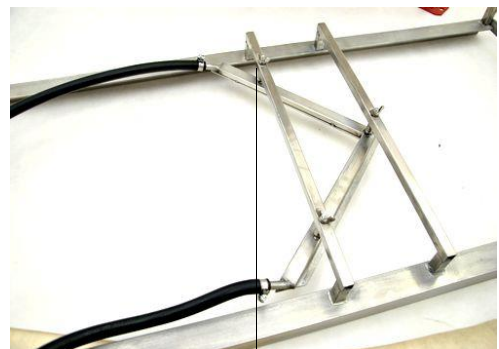

Uncapping knife's angle regulator screws

## Maintenance

1. Unplug the extractor from the power source prior to commencing any maintenance work.
2. Before using, the device should be washed carefully with hot water and small amount of detergents (allowed for use in food industry).
3. Dry the device thoroughly after washing.