

# Instructions manual

Uncapping table  
750mm, 1000mm and 1500mm



# LYSON

**Przedsiębiorstwo Pszczelarskie Łyson**

Spółka z o.o.

34-124 Klecza Górna, st.Pszczela 2, Poland

[www.lyson.eu](http://www.lyson.eu), e-mail; [lyson@lyson.com.pl](mailto:lyson@lyson.com.pl)

Tel. +48 33/875-99-40, +48 33/870-64-02

## Table of contents

W4042, W4042B, W4042C, W4042D, W4042E, W4042E\_CL, W4042F, W4042F\_CL, W4042G, W4042G\_CL, W40420, W40420A, W40420B, W40420B\_CL, W40420C, W40420C\_CL, W40420E, W40420M, W4046B, W4046BE, W4046C, W4046C\_LN, W4046D, W4046E, W4046F, W4046G, W40460AE, W40460B, W40460B\_CL, W40460BE, W40460B\_LN, W40460B\_LN\_CL, W40460C, W40460C\_CL, W40460C\_LN, W40460C\_LN\_CL, W40460C\_18, W40460CE, W40460H, W4094

1. General safety instructions
  - 1.1. Intended use
  - 1.2. Operation safety
2. General instructions – preparation for use
  - 2.1. Instructions of use
3. Product description
  - 3.1. Technical specifications
4. Storage
5. Maintenance and cleaning
6. Waste disposal and environmental protection
7. Warranty



## 1. General safety instructions

Before first use read the manual carefully and follow the instructions contained therein. The manufacturer is not liable for damage caused by equipment used inappropriately or by incorrect handling.

### 1.1. Intended use

1. The device is designed for uncapping hive frames and allows to hang the prepared frames to be hung and stored on its internal rails before the process of honey extraction
2. Before and after use, the equipment should be thoroughly washed with hot water cleaning agents approved for contact with equipment used in the food industry and then rinsed thoroughly with clean water.



### 1.2. Operation safety

- a) Set the device on a surface that allows full stability!
- b) The device is not intended for use by persons (including children) with limited physical, sensory or mental abilities, or by inexperienced users, unless under supervision or with instructions given by an accountable party. This device is not a toy, and shouldn't be used as one. Children should not to play with it.

## 2. General instructions – preparation for use

The purpose of the 750, 1000 and 1500mm uncapping tables is to prepare the frames before the process of honey extraction.

They are equipped with perforated insert sieves on which the wax cappings accumulate. Dripping honey goes through the sieves and accumulates on a profiled, sloping bottom (applies to reinforced tables) towards the 6/4" drain valve. The tables' height is adjustable.

### 2.1. Instructions of use

Set the device up in a designated, clean, dry and well lit room. Perform additional technical and operational checks. Open the drain valve and place an empty container underneath it to catch draining honey. During operation, check regularly the level of honey in the container and the amount of wax cappings collected on the perforated insert sieves and empty them if necessary. Uncapped frames, before extracting, are hung on the dedicated rails (Fig.3) of the table, along its length.

## 3. Product description

Fig.1



1. Frame uncapping stand
2. Perforated insert sieve
3. 6/4" Flap drain valve
4. Leg
5. Height adjustment knobs
6. Tank

Fig.2

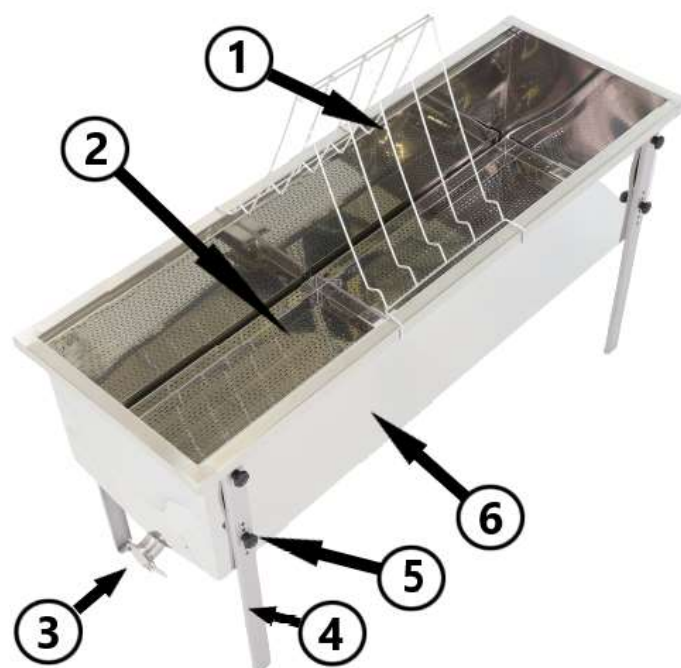


Fig.3



**The rail designed for hanging the uncapped frames**

### 3.1. Technical specifications

- 0,8 mm thick 0H18N9 acid resistant stainless-steel tank, perforated sieves and frame stand.
- Powder coated steel legs
- frame type dedicated sizing of the tables
- 3 lengths available: 750, 1000 i 1500mm.
- Adjustable height
- 6/4" flap design stainless-steel drain valve

### 4. Storage

Clean and dry the unit thoroughly after use.  
An additional technical check should be carried out periodically, and if any defects are found, please contact the manufacturer.

### 5. Cleaning and maintenance



#### **IMPORTANT!**

Before first use the equipment must be thoroughly cleaned and dried.

Clean with hot water using detergents allowed in food industry using a soft cloth.

After cleaning rinse the device and allow it to dry thoroughly.

Store the device in a dry room.

Do not use any chemical agents to protect the devices elements.

### 6. Waste disposal and environmental protection

The used product must be disposed in accordance with the local regulations. Return the device to a collection point from where it can be submitted for environmentally compatible recycling.

The consumer has the right to return used equipment directly to the manufacturer's distribution network, free of charge, while replacing it with a new unit as long as the used device is of the same kind and same application as the newly purchased device.

### 7. Warranty

The product purchased from the Lyson Company is covered by a manufacturer's warranty. The warranty period is 24 months from the date of purchase.

All purchased products come with receipts or VAT invoices.

Warranty details at:

[www.lyson.com.pl](http://www.lyson.com.pl)